

KFPA

2. KFPA pressure indicating controller (Fixed range type)

Basic model No.
KFPA -

I

II

III

IV

V

VI

VII

VIII

 -

IX

Model No. Ex. KFPA12-01003A1P - X				Selection																					Selection										IX Option			Y -Spec													
				I, II		III to V Measuring Range												III to V Measuring Range							VI		VII											VIII													
				Element	Signal Receiver	(Negative press.) (-) 101 to 0kPa (0 to (-) 760mmHg)	0 to 50 kPa (0 to 0.5 kgf / cm ²)	0 to 100 kPa (0 to 1 kgf / cm ²)	0 to 150 kPa (0 to 1.5 kgf / cm ²)	0 to 200kPa (0 to 2 kgf / cm ²)	0 to 300 kPa (0 to 3 kgf / cm ²)	0 to 400kPa (0 to 4 kgf / cm ²)	0 to 500kPa (0 to 5 kgf / cm ²)	0 to 600 (0 to 6 kgf / cm ²)	0 to 1000kPa (0 to 10 kgf / cm ²)	0 to 1500kPa (0 to 15 kgf / cm ²)	0 to 2000 kPa (0 to 20 kgf / cm ²)	0 to 2500kPa (0 to 25 kgf / cm ²)	0 to 3500kPa (0 to 35 kgf / cm ²)	0 to 5000kPa (0 to 50 kgf / cm ²)	0 to 7000kPa (0 to 70 kgf / cm ²)	0 to 10MPa (0 to 100 kgf / cm ²)	0 to 15MPa (0 to 150 kgf / cm ²)	0 to 25MPa (0 to 250 kgf / cm ²)	0 to 35MPa (0 to 350 kgf / cm ²)	(0.2 to 1 kgf / cm ²) Signal Receiver	Air Piping		Pneumatic Signal * 1											Mounting											
																											Connection * 2	1 / 4 NPT internal	Rc 1 / 4 internal	1	2	3	4	8						A	D	P	S	T	X	K	M	7			
Type	Control Model	Model No.	Price	01	02	03	760	805	810	815	820	003	004	005	006	010	015	020	025	035	050	070	100	150	250	350	821	A	B	1	2	3	4	8	A	D	P	S	T	X	K	M	7	138	[]	158	* 3				
Indicating transmitter	Non -Control	KFPA00	426	0	0	0	133	14	14	14	14	0	0	0	0	0	0	0	0	0	0	0	0	20	20	42	40	0		0		20		0		50	0	0	0	0	8	67	31								
				✓																																															
Indicating Controller (Local Type)	P+Manual Reset	KFPA11	426	✓																																															
	PI	KFPA12	432	✓																																															
	PID	KFPA13	483																																																
	PD+Manual Reset	KFPA14	475																																																
	PI + Batch	KFPA15	515		✓																																														
	On -Off	KFPA16	420																																																
	Differential Gap	KFPA17	416																																																
	P + External Reset	KFPA18	431																																																
Indicating Transmitting Controller (Local Type)	PD+External Reset	KFPA19	483																																																
	P+Manual Reset	KFPA21	604	✓																																															
	PI	KFPA22	617																																																
	PID	KFPA23	666																																																
	PD + Manual Reset	KFPA24	658																																																
	PI + Batch	KFPA25	699																																																
	On -Off	KFPA26	604																																																
	Differential Gap	KFPA27	604																																																
Indicating Controller (Cascade Type)	P + External Reset	KFPA28	617																																																
	PD + External Reset	KFPA29	666																																																
	P + Manual Reset	KFPA31	582	✓																																															
	PI	KFPA32	592																																																
	PID	KFPA33	641																																																
	PD + Manual Reset	KFPA34	639																																																
	PI + Batch	KFPA35	674																																																
	On -Off	KFPA36	579																																																
Indicating Transmitting Controller (Cascade Type)	Differential Gap	KFPA37	582																																																
	P + External Reset	KFPA38	592																																																
	PD + External Reset	KFPA39	641																																																
	P + Manual Reset	KFPA41	692	✓																																															
	PI	KFPA42	704																																																
	PID	KFPA43	754																																																
	PD + Manual Reset	KFPA44	748																																																
	PI + Batch	KFPA45	787																																																
On -Off	KFPA46	693																																																	
Differential Gap	KFPA47	692																																																	
P + External Reset	KFPA48	704																																																	
PD + External Reset	KFPA49	754																																																	